


Bridging 3CX with an Asterisk PBX

In this document we are going to demonstrate how to create a bridge between a 3CX (V14) and an Asterisk PBX (FreePBX 13). We will assume both systems are in the same local LAN.

Setting up 3CX

From the 3CX Management Console go to “**Bridges**” and “**Add Bridge**”.

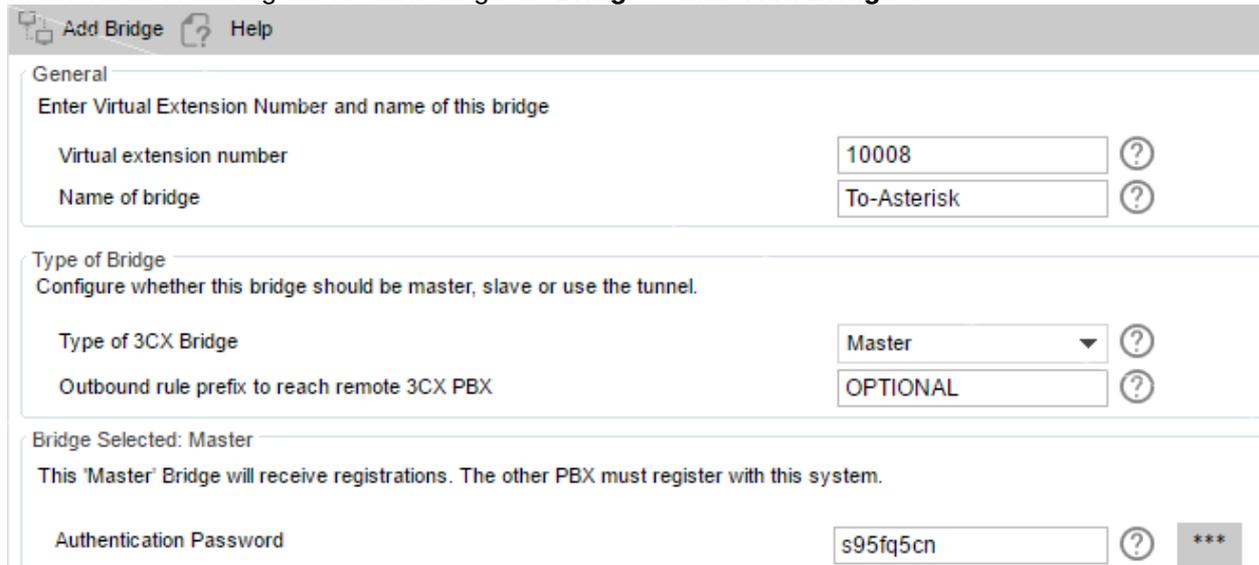

The screenshot shows the 'Add Bridge' form in the 3CX Management Console. The form is divided into three sections: General, Type of Bridge, and Bridge Selected. The 'General' section has two input fields: 'Virtual extension number' with the value '10008' and 'Name of bridge' with the value 'To-Asterisk'. The 'Type of Bridge' section has a dropdown menu for 'Type of 3CX Bridge' set to 'Master' and an input field for 'Outbound rule prefix to reach remote 3CX PBX' with the value 'OPTIONAL'. The 'Bridge Selected' section shows 'Master' selected and a note: 'This 'Master' Bridge will receive registrations. The other PBX must register with this system.' There is also an 'Authentication Password' field with the value 's95fq5cn' and a masked password icon.

In the “**Add Bridge**” form fill in the following:

- 1.Virtual extension number: Leave the default value or enter a new 5-digit value of your own. Make a note of this value as it will be used later on in this guide and is going to be referred to as “**Bridge ID**”. Also note that this value cannot be changed after creating the bridge.
- 2.Name of Bridge: This can be anything, it’s just a way of identifying this specific Bridge connection within the 3CX Management Console.
- 3.Type of 3CX Bridge: Set this value to “**Master**”.
- 4.Outbound rule prefix to reach remote 3CX PBX: If a prefix is going to be necessary for calls originating from 3CX to the Asterisk PBX, then in this field enter the prefix that is going to be used. This field can also be blank if no prefix is going to be used.
- 5.Authentication Password: By default an 8-digit alphanumerical value is generated but can be changed. Make a note of this value as it will be used later on in this guide and is going to be referred to as “**Bridge Password**”.
- 6.Assigned Codecs: In this list enter the Audio Codecs you want to be used for the calls being made over the bridge, as well as the priority order. By default GSM-FR is the only codec but you can change this and/or add additional ones as required. Keep in mind that the codecs you select here must be supported from the Asterisk PBX as well.

All other Options like ‘Allow tunneled connection’, ‘Publish information’, ‘Receive information’, ‘Supports Re-Invite’, ‘Support Replaces’, ‘PBX Delivers Audio’ shall be left in the default state.

You will now be prompted to create an Outbound Rule where you will set which calls will be forwarded over this Bridge.

Outbound Rules are not covered in this guide, but more information about them can be found here:

•<http://www.3cx.com/3cxacademy/videos/basic/configuring-outbound-routing/>

•<http://www.3cx.com/3cxacademy/videos/advanced/least-cost-routing/>

Setting up the Asterisk PBX

On the Asterisk PBX, create a Trunk with the following settings:

The screenshot shows the Asterisk PBX configuration interface for a SIP Trunk. The 'sip Settings' tab is active, and the 'Outgoing' sub-tab is selected. The 'Trunk Name' is set to '3CX Bridge Outgoing'. The 'PEER Details' section is expanded, showing the following configuration:

Trunk Name	3CX Bridge Outgoing
PEER Details	host=192.168.9.206 port=5060 username=10003 fromuser=10003 secret=123456 sendrpid=yes qualify=yes type=peer

Trunk name : 3CX

Outgoing - PEER Details:

host=[3CX IP]

port=[3CX SIP Port]

username=[Bridge ID]

fromuser=[Bridge ID]

secret=[Bridge Password]

sendrpid=yes

qualify=yes

type=peer

General	Dialed Number Manipulation Rules	sip Settings
<div style="display: flex; justify-content: space-between;"> Outgoing Incoming </div>		
USER Context ⓘ		3CX Bridge Incoming
USER Details ⓘ		host=192.168.9.206 port=5060 type=peer trustpid=yes context=from-trunk
Register String ⓘ		10003:123456@192.168.9.206:5060/10003

Incoming - USER Details

host=[3CX IP]

port=[3CX SIP Port]

type=peer

trustpid=yes

context=from-trunk

Register String

[Bridge ID]:[Bridge Password]@[3CX IP]:[3CX SIP Port]/[Bridge ID]

Where:

- [Bridge ID]: Is the Virtual Extension Number you have set in the 3CX Bridge settings as explained in section“**Setting up 3CX**”.
- [Bridge Password]: Is the Password you have set in the 3CX Bridge settings as explained in section“**Setting up 3CX**”.
- [3CX IP]: Is the IP Address/FQDN of 3CX Phone System to which the Asterisk PBX is going to be connecting to.
- [3CX SIP Port]: Is the SIP Port 3CX is using. On single-instance 3CX installations, the SIP port being used can be found in the Management Console → Settings → Network → “**General**” tab, in the “**SIP Port**” field (Default is 5060).

On the Asterisk system you will also have to set up Inbound and Outbound Routes to define which calls should be sent over the bridge connection and how incoming calls should be routed, however this is out of the scope of this guide.

Checking the Configuration

After configuring both 3CX and Asterisk as explained throughout this document, the Bridge should be active and in the 3CX Management Console the Bridge Connection should show up as “**Registered**” in System Status → Ports/Trunks.

■	Registered (idle)	10003	Bridge	Asterisk Bridge
--------------------------------------	-------------------	-------	--------	-----------------

Expected Sample Captures:

```

- Session Initiation Protocol (INVITE)
  + Request-Line: INVITE sip:101@192.168.9.206:5060 SIP/2.0
  - Message Header
    + Via: SIP/2.0/UDP 10.172.1.25:5061;branch=z9hg4bk16fb373f;rport
      Max-Forwards: 70
    + From: "John Smith" <sip:10003@10.172.1.25:5061>;tag=as106c71e7
    + To: <sip:101@192.168.9.206:5060>
    + Contact: <sip:10003@10.172.1.25:5061>
      Call-ID: 34d5d584503cf11e15cce8444bc16066@10.172.1.25:5061
    + CSeq: 103 INVITE
      User-Agent: FPBX-13.0.106(13.7.0)
    + Proxy-Authorization: Digest username="10003", realm="3CXPhoneSystem", algorithm=MD5
      Date: Thu, 21 Apr 2016 13:50:53 GMT
      Allow: INVITE, ACK, CANCEL, OPTIONS, BYE, REFER, SUBSCRIBE, NOTIFY, INFO, PUBLISH
      Supported: replaces, timer
    + Remote-Party-ID: "John Smith" <sip:100@10.172.1.25>;party=calling;privacy=off;screen=yes
      Content-Type: application/sdp
      Content-Length: 325
  + Message Body

```

- 101 is the dialed number
- 10003 is the Virtual Extension Number
- “John Smith” and 100 are the Callers Display Name and Caller ID
- 10.172.1.25:5061 is the IP and SIP Port of the Asterisk PBX
- 192.168.9.206:5060 is the IP and SIP Port of the 3CX Phone System